Assembly Instructions for UR361860

Step 1

Note:
Post are directional. The slot must point down.

Figure B

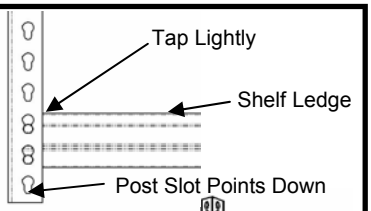

Figure A

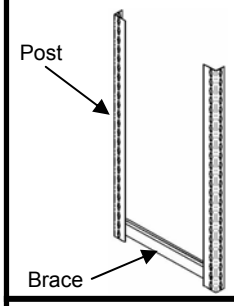

Figure C

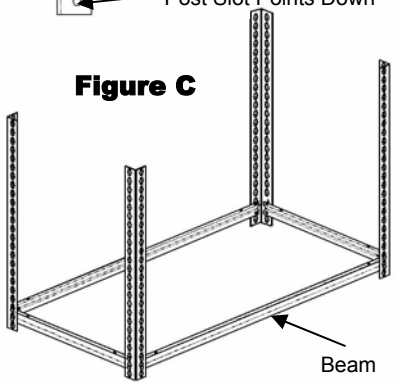

Assemble two (2) post with one (1) **double** brace (see figure A). Skipping one slot from the bottom of the post, place the rivets into post with the shelf ledge facing up (see figure B). Tap lightly to seat rivets. Repeat with two (2) post and one (1) **double** brace. Assemble the two (2) post end units with two (2) **double** beams (see figure C). Skip one slot from the bottom of post, tap lightly to seat rivets.

Step 2

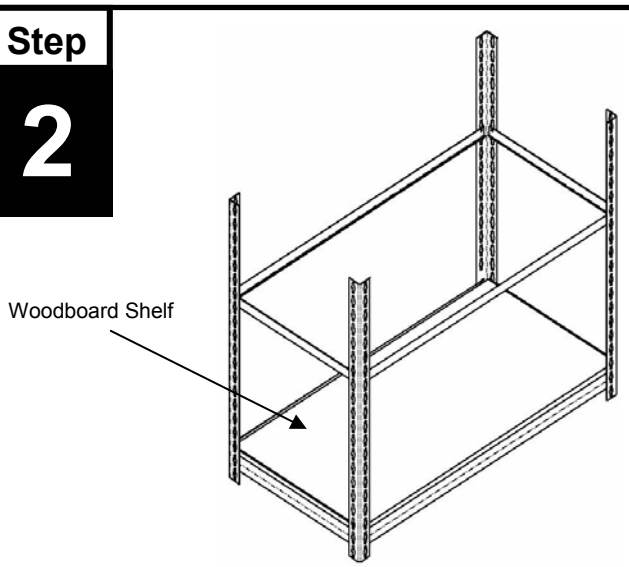

Start by adding a woodboard shelf to the level previously built, then continue working by adding the second level using two (2) **single** beams and two (2) **single** braces in the post slots of your desired location. Again place the rivets of the beams and braces into the post slot with the shelf ledge facing up and tap lightly to seat the rivets.

IMPORTANT NOTE : Make sure all rivets are fully seated into the post slots.

Step 3

Note:
Post are directional. The slot must point down.

Figure D

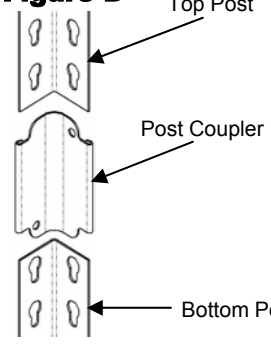

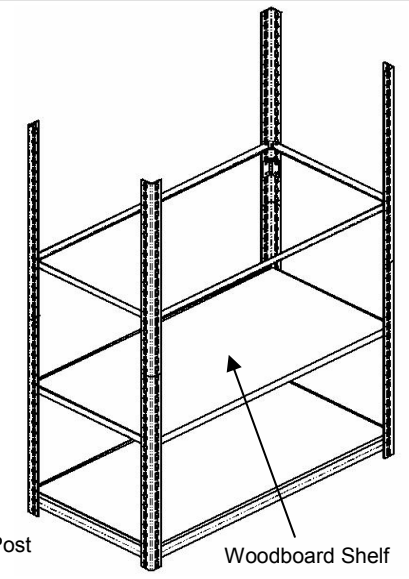

Add a woodboard shelf to the previously built level, then assemble the top post to the bottom post by using four (4) of the post couplers. Place the couplers into the top of the bottom post, and the bottom of the top post and tap down to properly seat (see figure D). Continue by adding the third level of **single** beams and **single** braces just above the post couplers. Again tap lightly to seat the rivets.

Step 4

Figure F

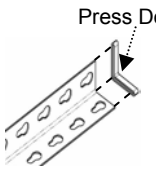

Figure E

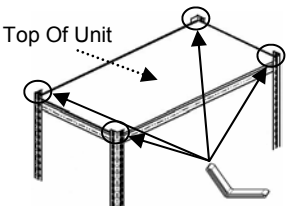

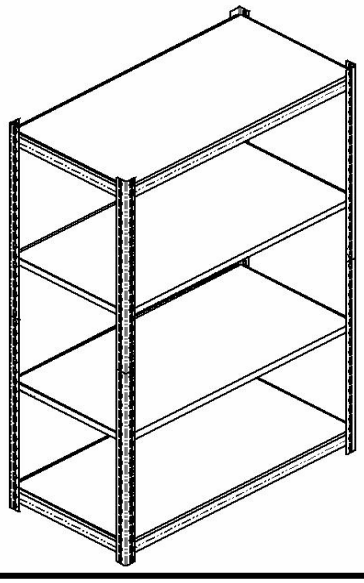

Add a woodboard shelf to the previously built level, then continue by adding the final level to the unit using two (2) **double** beams and (2) **double** braces. Tap lightly to properly seat the rivets and add the final woodboard shelf to the top of the unit. Install all four (4) end caps to the top of the unit after assembly has been completed (see figure E). Install end caps to post by pressing down on end cap at the three points illustrated above (see figure F).